

Briggs & Stratton
- Engine Starting -

1. Secure an engine stand in a vise



2. Place engine on stand and secure with four bolts.



3. Fill engine oil to correct level.



6. Outside, fill fuel tank with sufficient fuel to run approximately 10 min.



Make sure you have a tank gasket!

Submerge bottom of pick-up tube in 1 cm of fuel.

7. Apply choke valve and move speed control lever to full throttle position.
** one the engine starts the choke valve will need to be pushed in to keep the engine running.




8. **Outside**, With engine secured in a vise. Use the recoil starter to start the engine.




Check behind you before pulling recoil starter!

8. Caution: When engine is running, and for some time afterward, the muffler will be extremely hot!

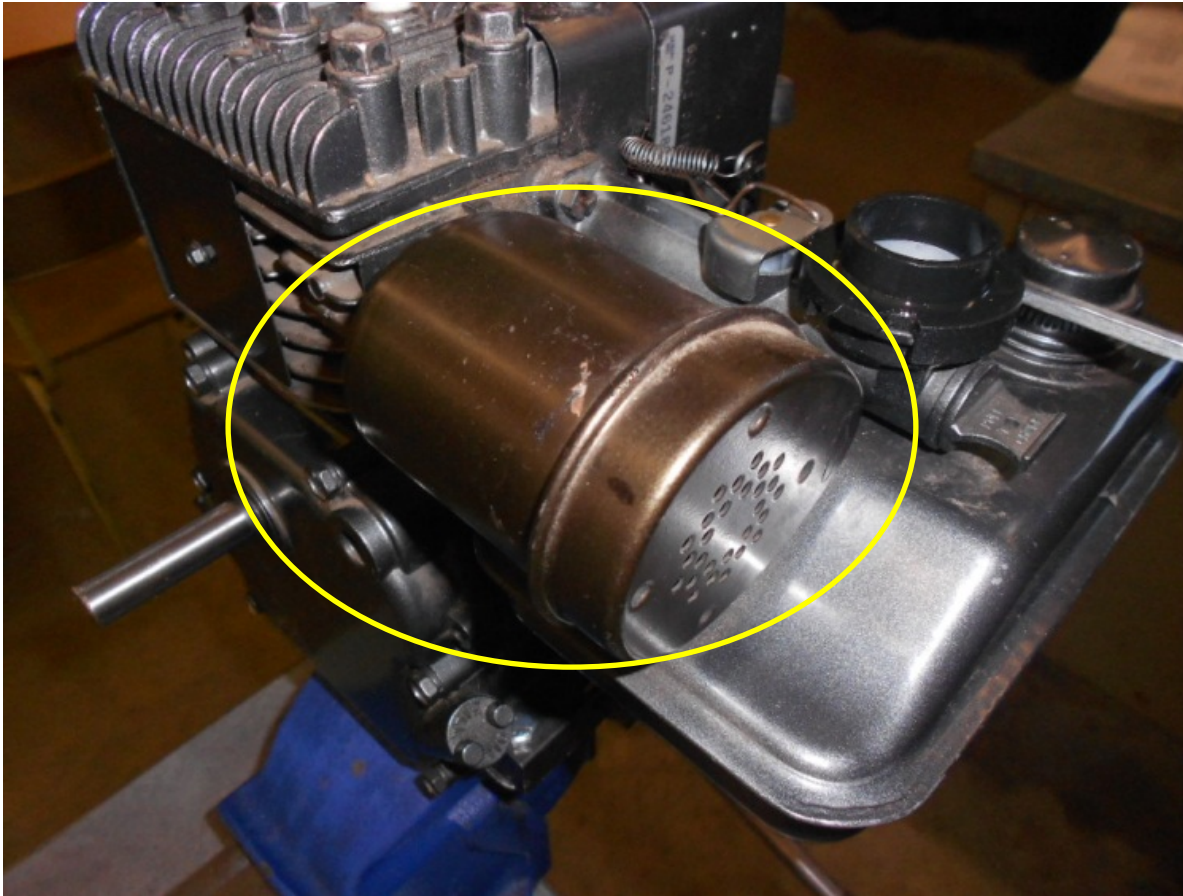

8. Caution: Air intake can 'suck' in hair!

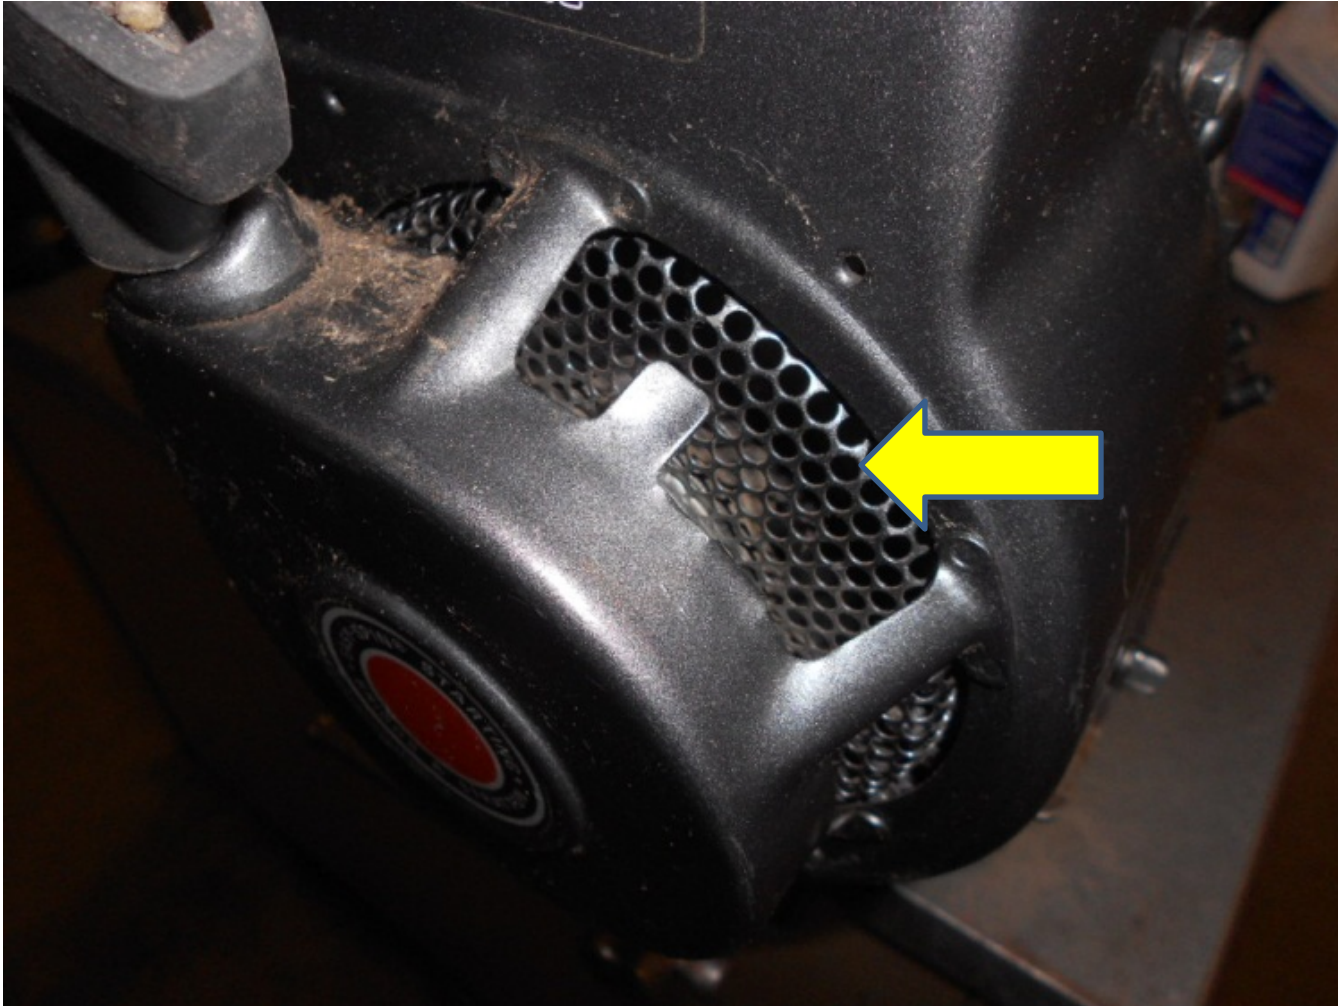

8. Caution: Spinning crankshaft on 'less visible side of engine'.

