


Procedure

Jewelry Sawn Wood Pendant

1. Cut out one of your designs, then use a glue stick to stick the design to your workpiece.

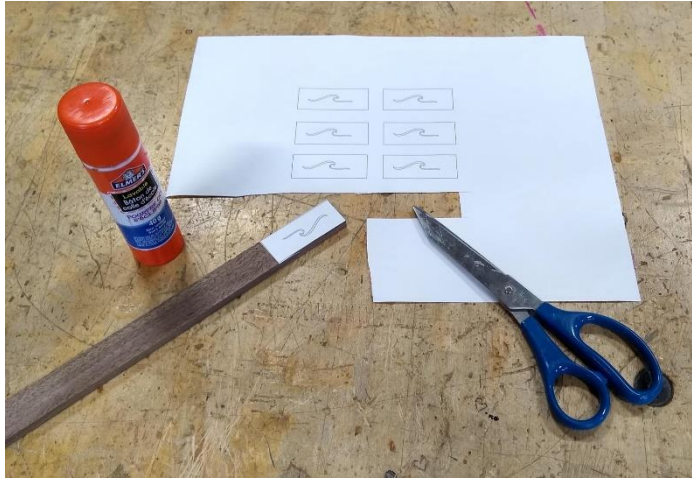

2. At the Band Saw, use a mitre gauge (check for square) to cut your pendant to length



3. Drilling (if needed, otherwise move to step #4)

- Use a Dremel drill to create a starter hole for sawing designs fully surrounded by wood



4. Use a bench pin secured to your workbench and a jewelry saw to cut out your design

- Keep fingers clear!
- If needed, use a Dremel drill to create a starting point in the design
- Use an appropriate saw blade for wood
- Teeth of blade point outward and down
- Make sure blade is correctly tensioned



5. Clean up any issues using small files and/or sandpaper



6. Drill a hole for a cord
- Carefully measure and mark the location for the hole
 - At the drill press, using an appropriately sized drill for the string being used and a drilling jig to ensure the hole is drilled straight (see picture), drill the hole



<p>7. Sand the entire piece (all jewelry should be well finished)</p> <ul style="list-style-type: none">• Take care not to significantly change the shape of the piece• Leave no sharp edges• 1st sanding - use 80 grit to remove all machining marks and imperfections• 2nd sanding - use 120 grit (will remove scratches left by 80)• 3rd sanding - use 180 grit (will remove scratches left by 120)	<p><i>Picture coming soon...</i></p>
<p>8. Apply a finish</p> <ul style="list-style-type: none">• finishes protect and beautify the wood• follow the specific directions for the finish being used	<p><i>Picture coming soon...</i></p>
<p>9. Install the cord</p> <ul style="list-style-type: none">• obtain and cut a suitable length of waxed cotton cord (consider extra needed for knot tying)• Tie two typical jewelry slip knots to create an adjustable length system• Seal the ends of the string to prevent fraying	<p><i>Picture coming soon...</i></p>
<p>10. Submit your project for grading</p>	